

		HXR-NX5R		PXW-FS5		PXW-Z150		PXW-FS7	PXW-FS7M2	PXW-X180 /X160		PXW-Z100	FDR-AX1	HXR-NX100	HXR-NX3	HXR-NX1	HXR-NX5	HXR-NX70	HXR-MC2000	HXR-MC1500	NEX-FS700/R	NEX-EA50	NEX-FS100	HVR-Z7	HVR-Z5	HVR-S270	HVR-HD1000	HVR-A1	HVR-V1	HVR-Z1	DSR-PD150P /PD177P /PD198P
		V1.00/V1.10		V2.0	V3.0/V4.0	V1.0	V2.0	V4.0	V1.0	V3.1	V4.0	V5.1	V4.0	V1.0	V2.0	V1.0	V2	V3.0	V1.0	V3.2	V2.0	V2.0									
Zoom		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	-	○	○	○	○	○	○		
Iris	Auto/Manual	○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	○	x	○	x	x	○	○	○	x	x	x	○	○		
	Dial	○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	○	x	○	x	x	○	○	○	x	x	x	○	○		
	Push Auto Iris	○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	○	x	○	x	x	○	○	○	x	x	x	○	○		
Focus	Auto/Manual	○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	○	x	○	x	x	○	○	○	x	x	x	○	○		
	Dial	○	○	○	○	○	○	○	○	x	○	x	x	x	x	○	-	○	x	x	x	○	○	○	x	x	x	○	○		
	Push Auto Focus	○	○	○	○	○	○	○	○	x	○	x	x	x	x	○	-	○	x	x	x	○	○	○	x	x	x	○	○		
REC Start/Stop		○	○	○	○	○	○	○	○	x	(*)6	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
WHT BAL		○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	○	x	○	x	x	○	○	○	x	x	x	○	○		
PRESET		○	○	○	○	○	○	○	○	x	○	x	x	○	○	-	○	(*)9	-	-	○	○	○	-	-	x	x	○			
A		○	○	○	○	○	○	○	○	x	○	x	x	○	○	-	○	(*)9	-	-	○	○	○	○	○	-	-	x	x		
B		○	○	○	○	○	○	○	○	x	○	x	x	○	○	-	○	(*)9	-	-	○	○	○	○	○	-	-	x	x		
WB SET		○	○	○	○	○	○	○	○	x	○	x	x	○	○	x	○	(*)9	x	x	○	○	○	x	x	x	○	○			
GAIN		○	○	○	○	○	○	○	○	x	○	x	x	○	○	x	○	x	x	x	x	x	x	x	x	x	x	x			
GAIN SELECT		○	○	○	○	x	x	○	○	x	○	x	x	○	○	x	○	x	x	x	x	x	x	x	x	x	x	x			
SHUTTER		○	○	○	○	x	○	○	○	x	○	x	x	○	○	x	○	x	○	x	○	○	○	x	x	x	○				
(SHUTTER SELECT) (*1)		○	○	○	○	x	○	○	○	x	○	x	x	○	○	x	○	x	○	x	○	○	○	x	x	x	○				
Menu		○	○	○	○	○	○	○	○	x	○	x	x	○	○	x	○	○	○	○	○	○	○	x	x	x	○	○			
SEL/SET	Up/Down	○	○	○	○	○	○	○	○	x	○	x	x	○	○	x	○	x	x	x	x	x	x	x	x	x	x	○			
	Right/Left	○	○	○	○	○	○	○	○	x	○	x	x	○	○	x	○	○	○	○	○	○	○	-	-	-	x	-			
	Execute	○	○	○	○	○	○	○	○	x	○	x	x	○	○	x	○	○	○	○	○	○	○	x	x	x	○	○			
CANCEL/BACK		-	-	-	-	-	-	-	-	x	○	x	x	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-			
THUMBNAIL		○	○	○	○	○	○	○	○	x	○	x	x	x	x	x	-	x	x	x	-	-	-	-	-	-	-	-			
DISPLAY		○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
ASSIGN1		○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	-	○	○	○	○	○	○	-	x	x	○				
ASSIGN2		○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	-	○	○	○	○	○	○	-	x	x	○				
ASSIGN3		○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	-	○	○	○	○	○	○	-	x	x	○				
ASSIGN4		○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	-	○	○	○	○	○	○	-	x	x	○				
ASSIGN5		○	○	○	○	○	○	○	○	x	○	x	x	○	○	○	-	○	○	○	○	○	○	-	x	x	○				
ASSIGN6		○	○	○	○	○	○	○	○	x	○	x	x	-	○	○	-	○	○	○	○	○	○	-	x	x	○				
ASSIGN DIAL		-	○	○	-	-	○	○	-	○	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-			
ND	Auto/Manual	-	x	○	-	-	-	○	-	x	○	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-			
	Dial	-	x	○	-	-	-	○	-	x	○	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-			
	Push Auto ND	-	-	-	-	-	-	-	-	○	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-			
TALLY(*2)		○	x	○	x	○	x	○	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x			
COUNTER RESET(*2)		○	○	○	○	○	○	○	○	x	○	x	x	○	○	x	○	x	x	○	○	○	○	x	○	○	○				
Daisy Chain		○	○	○	○	○	○	○	○	○	○	○	○	x	x	○	x	x	x	x	x	x	○	○	○	○	○				

*1) Use the joystick up/down for SHUTTER SELECT

*2) Command from MCX-500. No dedicated key on the RM-30BP

*3) Not so smooth